



01 / Package Contents

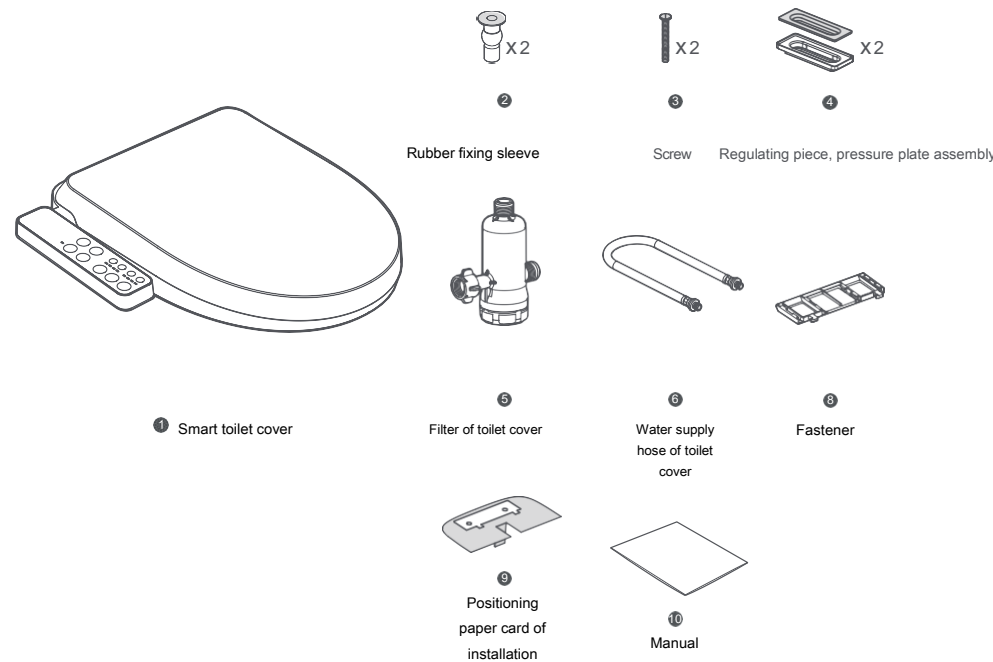

02 / Product Introduction

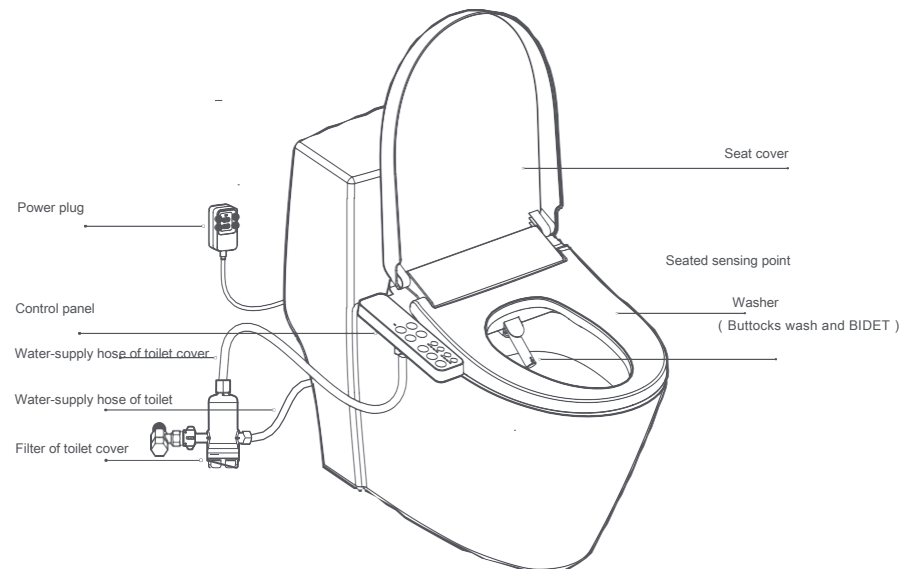

03 / Installation Instructions

Confirmation of power supply

Please use the power socket within the specified range (AC 220V±10%, maximum current above 10A).

The length of the power cord is approximately 1.5 meters. Install the power socket within the reach of the power cord and above the floor where it is not easy to get wet by water.


Be sure to install the ground wire. Please deliver the wiring installation to the electrical installation company. Do not insert the power plug into the socket before completion of installation to avoid malfunction.

Confirmation of water pressure

Measure the amount of water flowing out for 10 seconds when the angle valve of water supply is fully opened. If it exceeds 2.3 liters, it means that the water pressure meets the installation index of the smart toilet cover. Otherwise, a booster pump is needed to boost pressure.


Confirmation of the space in the bathroom

The smart toilet cover is installed as shown in the picture below. Please make sure that there is enough space in the bathroom.

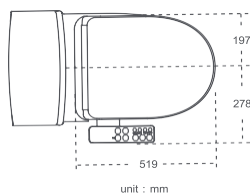


Confirmation of size

Please confirm the size of the toilet and smart toilet cover when installing. The following picture shows the distance between the mounting holes and the distance between the mounting holes and the toilet-seat. Please consult a technical engineer for details.

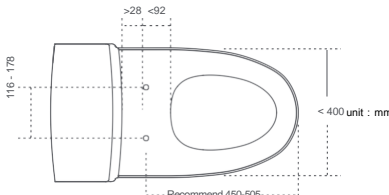


The distance between the water supply angle valve of the smart toilet cover and the toilet shall not exceed 600mm.

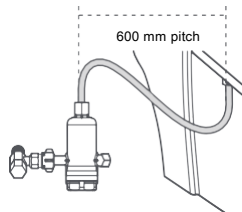

04 / Installation

Install smart toilet cover

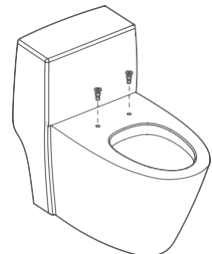


1 Install rubber fixing sleeve

Remove the previous toilet cover and insert the rubber fixing sleeves into the installation hole.

2 Position the paper card of installation

Place paper card of installation in the center, and fold down the edge of the washer vertically, close to the ceramic inner ring.

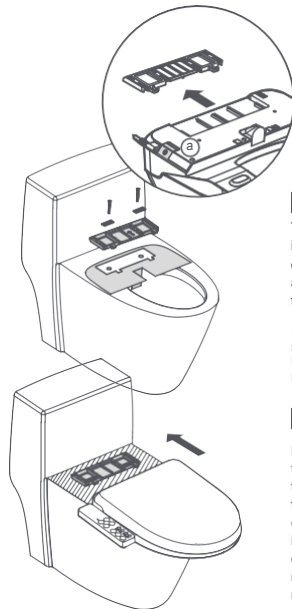

3 Install fastener

The fastener is placed in the box of installing paper card, and the screw is put on the regulating piece & pressure plate assembly, and screwed into the rubber fixing sleeve.


Note: The fastener is on the base of the smart toilet cover. Press the remove button (a) as shown in the picture below to remove it.

4 Fix the smart toilet cover

Remove the installing paper card. Push the smart toilet cover flat into place, and the buckle will lock automatically. If it is found that the position of the smart toilet cover does not match the ceramic position, it can be solved by adjusting the position of the fastener. Press and hold the whole machine button on the side, pull out the main machine, loosen the screw to adjust the position of the fastener, and then lock it.


05 / Installation

Install filter of toilet cover and water-supply hose

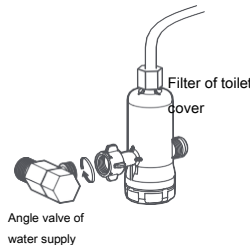


1 Install filter of toilet cover

Open the water-supply angle valve, and drain the sand and other impurities that may remain in the water pipe. Then install the filter of toilet cover (tap water inlet) to the water-supply angle valve, and tighten it with a wrench.

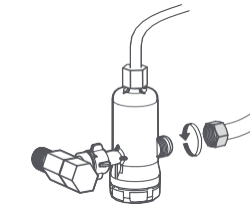

2 Connect the water-supply hose of toilet

Install the water-supply hose of toilet to the filter of toilet cover (tap water outlet) and tighten it with a wrench.

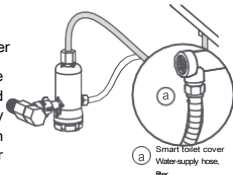

3 Connect the steel mesh filter


Install the water-supply hose of smart toilet cover to the filter of toilet cover (tap water outlet). Insert the other end of the water-supply hose of smart toilet cover into the water inlet of the steel mesh filter and tighten the screw.

06 / Installation

Confirm water supply

Turn the water-supply angle valve to the left and open it to the maximum to confirm that there is no water leakage at each connection part.

Note: If a leaks water, please retighten the nut and install it again.

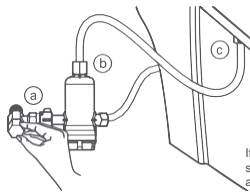


If b or c leaks water, check whether the sealing ring is lost. If it is lost, please contact after-sales service.

Connect power supply

Insert the power plug into the wall socket :

- After the power-on, press the "Reset" button and the power indicator will light up.
- Press the "Test" button again, if the power indicator is off and the power is out off, it means that the leakage protector is working normally.
- Press the "Reset" button again, if the power indicator lights up, you can start using the machine normally.

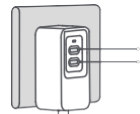

Ensure that the socket is well grounded.
① It is recommended to check the status of the leakage protector regularly (such as one month) by pressing the "Test" button


Pilot run

Are the functions of the product normal?
Is the adjustment of buttocks washing and bidet washing (including washing intensity adjustment, nozzle position adjustment), water temperature, and seat temperature normal?
Series of actions above should be checked.

To test the operation of the buttocks washing process, please touch the seated sensing point with your hand. It is equipped with a seated sensing device to sense whether the human body is seated. If there is nobody seated, functions such as buttocks washing and bidet washing cannot be activated.


Note: Press the button and cover the front of the washer with a plastic sheet to block the flow of washing water, which is to prevent water from spraying on the body or clothes. When turning off the washing, move your hand away from the seated sensing point or press the stop button.

Reset Test

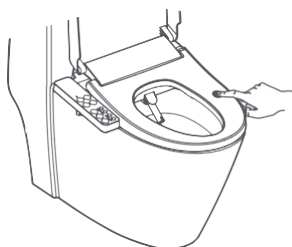

07 / How to Use

Operation panel

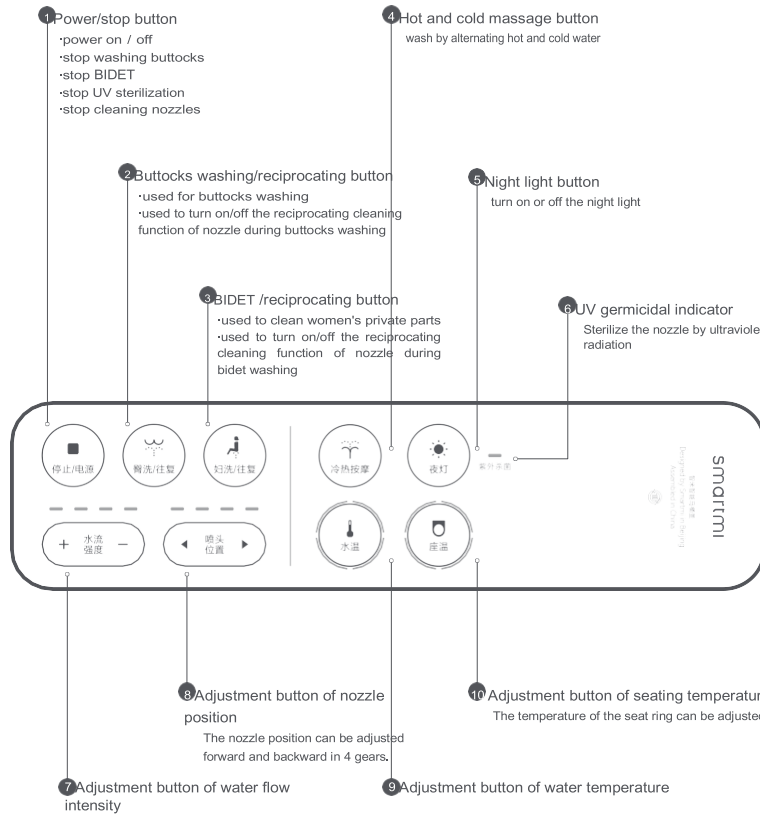

Stop/power

- Short press to start up, and the water flow intensity, nozzle position, water temperature, and seat temperature are turned on to the gear after the last use. In the power-on status, long press for 2 seconds to enter the standby status.
- When washing, press the button to stop the washing function.

Buttocks washing/reciprocation

- When seated, press the button to start the 'buttocks washing' function. You will be cleaned in the set gear of reciprocating washing, water flow intensity, nozzle position, and water temperature; the washing cycle is 4 minutes; during the washing process, the functions can be adjusted by hot and cold massage, water temperature adjustment, water flow intensity adjustment, and nozzle position.
- During the washing process, press 'buttocks washing/reciprocation' to turn on/off the reciprocating washing function.

Night light

When the toilet is on, press the button to turn on/off the night light; the color of the night light is white.

BIDET washing/reciprocation

- When seated, press the button to start the 'BIDET washing' function. You will be cleaned in the set gear of reciprocating washing, water flow intensity, nozzle position, and water temperature; the washing cycle is 4 minutes; during the washing process, the functions can be adjusted by hot and cold massage, water temperature adjustment, water flow intensity adjustment, and nozzle position.
- During the washing process, press 'BIDET washing/reciprocation' to turn on/off the reciprocating washing function.

Hot and cold massage button

When washing, press the 'cold and hot massage' button to start, the water temperature will not be heated for 5 seconds and turned on for 15 seconds for a cycle of heating. Press it again to stop this function.

UV sterilization

After leaving the seat for about 10 seconds, turn on the 'nozzle sterilization' and the UV will automatically turn on the sterilization mode for 3 minutes. At the same time, the UV sterilization indicator lights up. After the sterilization is finished, the UV sterilization indicator goes out.

08 /How to Use

Water temperature

Press the 'water temperature' button to adjust the water temperature. There are four heating gears for the water temperature. When the indicator light is off, the water temperature is the temperature of tap water. Depending on the using environment, the actual water temperature is about 30℃~ 41℃.

Water temperature gear	Water temperature
1st gear	about 33℃
2nd gear	about 35℃
3rd gear	about 37℃
4th gear	about 39℃

Self-cleaning of nozzle

The washing nozzle will clean the nozzle on its own during the process of outlet and return.

Filtration of water quality

Filter of smart toilet cover is replaceable; steel mesh filter with 80 meshes can be cleaned.

Seat temperature

Press the 'seat temperature' button to adjust temperature of the seat ring. There are four heating gears for the seat temperature. When the indicator light is off, the temperature of the seat ring is room temperature. Depending on the using environment and machine tolerances, the actual seat temperature is about 30℃ ~ 42℃, and the temperature difference of target seat is about 2 degrees for each gear. After recognizing that the user is seated, the function preventing low temperature & burn will be activated.

Nozzle cleaning

When leaving the seat, press and hold the 'water temperature' button for 2 seconds. The nozzles are fully extended for manual cleaning by the user; the nozzle cleaning cycle is 4 minutes, and the nozzle cleaning function can be stopped by pressing the "stop" button; you need to leave the seat during nozzle cleaning.


Convenient disassembly and assembly

The main body of the smart toilet cover can be easily removed. It is easy to clean and maintain.

10 /Cleaning and Maintenance

Cleaning and maintenance of nozzle

When leaving the seat, press and hold the "water temperature" button for 2 seconds. The nozzles are fully extended for manual cleaning by the user, and a toothbrush can be used to remove dirt or clogged impurities in the nozzle hole.

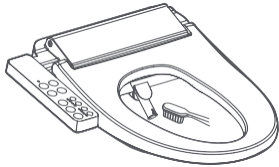

Warnings

Do not add water or detergent to the inside of the smart toilet cover. Do not wet the cover and power plug of the smart toilet with water or detergent. Otherwise, there may be a risk of electric shock and fire.

Cautions


When cleaning and maintaining the plastic parts, do not use unsuitable detergents. Otherwise, it may lead to crack of the plastic part and cause personal injury, electric shock or fire.

Such as concentrated sulfuric acid, concentrated nitric acid, glacial acetic acid, carbon tetrachloride, chloroform, acetone, methyl ethyl ketone, benzene, toluene, phenol, cresol, dimethyl formamide, methyl ether, soybean oil, acetate, 40% Nitric acid, concentrated hydrochloric acid, 95% alcohol, gasoline, kerosene, brake fluid and so on.

Antifreeze in winter

In the cold winter, when the product has been transported or stored for a long time, the remaining water in the product may freeze. To prevent the damage from freezing, please take anti-freezing measures.

1. In a warm room, place the product for 30 minutes and do not supply the water and electricity to the product until it is naturally thawed.
2. Switch the seat temperature to the 4th gear and close the cover.

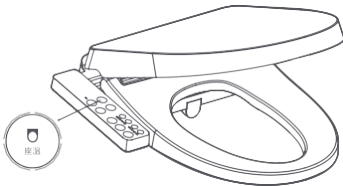

3. If it freezes and no water can be sprayed, cover the water-supply hose of the smart toilet cover with a cloth soaked in hot water (including the connecting parts at both ends) to defrost.

Cautions

1. Do not pour hot water or blow hot air on the water-supply hose of the smart toilet cover, otherwise it may cause the water-supply hose to break.
2. Please do not connect the power supply before the inside of the smart toilet cover is thawed, otherwise it may easily cause electric shock and fire.

Three-Guarantee Certificate

The after-sales service of Smartmi Smart Toilet Cover products strictly follows the "Consumer Rights Protection Law of the People's Republic of China" and "Product Quality Law of the People's Republic of China" to implement after-sales three-guarantee services. The service content is as follows:

Warranty period

Within 7 days from the day after you sign for the goods, provided that the goods (including packaging and accessories) are intact and have not been installed and used, you can return the goods without any reason. After use, if there is a performance failure listed in the "Product Performance Failure Table", which has been and determined by the Smartmi after-sales service center, you can enjoy free return or exchange services.

Within 8-15 days from the day after you sign for the goods, if there is a performance failure listed in the "Product Performance Failure Table", which has been and determined by the Smartmi after-sales service center, you can enjoy free exchange or repair services;

Within 36 months from the day after you sign for the goods, if there is a performance failure listed in the "Product Performance Failure Table", which has been and determined by the Smartmi after-sales service center, you can enjoy free repair services.

Tips:

Because the packaging box is required to ensure the safety of product transportation during shipment, it is recommended that you keep the packaging box for at least 15 days from the date of signing for the receipt.

Warranty content

Warranty content	Warranty period		Warranty period
	Whole machine	Parts of the machine itself (excluding main parts)	3 years
Smartmi Smart Toilet Cover	Main parts	PCBA (Circuit board)	
		Stepper motor	
		Power cord (leakage protection power cord)	

Note: Warranty regulations only apply to mainland China.

Non-warranty regulations

Unauthorized repairs, misuse, collision, negligence, abuse, fluid intake, accidents, alterations, incorrect use of accessories that are not belong to our products; or tearing, altering labels and false proof marks.

The validity period of three-guarantee service has expired;

Damage caused by force majeure.

Do not comply with the performance failures listed in the "Product Performance Failure Table"; The product and its accessories have performance failures listed in the "Product Performance Failure Table" due to human reasons.


Product Performance Failure Table

Name item	Performance failure
Smartmi Smart Toilet Cover	Cannot boot under normal circumstances.
	Under normal circumstances, there is no water spraying after the washer is extended.
	The seat ring will not be heated after 5-10 minutes under normal circumstances.
	Nozzle position/intensity cannot be adjusted under normal circumstances.
	No reciprocating washing is allowed under normal conditions.

09 /Cleaning and Maintenance

Maintenance of steel mesh filter

1. Please clean the filter in time according to conditions of local water quality for your health.
2. When the cleaning intensity is weakened, please clean the filter in time. When removing the filter, make sure that you close the water-supply angle valve. In addition, when installing the filter, please tighten it firmly to avoid water leakage.

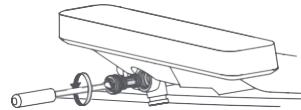


1 Remove the filter



2 Clean the filter

Maintenance of toilet cover filter

- 1.The smart toilet cover filter is installed on the angle valve, and it cannot be compressed by foreign bodies or near corrosive substances. When the cleaning intensity is weakened, please replace the filter element and filter cotton in time.*
 - 2.The toilet cover filter should be installed far away from overheating sources (heaters, bath lamps, etc.), and should be installed indoors. It is forbidden to be exposed to the sun or in cold and frozen places.
- * The actual replacement cycle will be various due to different using areas, water quality, seasons and usage amount.

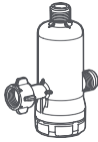


1. Cleaning and maintenance methods of seat ring, cover plate and cover (parts of plastic products)

Please wipe the product with a soft damp cloth. If the dirt is not removed in time, it will be difficult to clean, so please wipe with water frequently. In addition, wiping with water can prevent the generation of static electricity, and static electricity can absorb dust, which will cause the product to become black and dirty.

2. Removal of smart toilet cover

Press and hold the disassembly button on the right side of the smart toilet cover to remove the toilet cover from the toilet, which is convenient for the cleaning of the part between the toilet and the smart toilet cover.

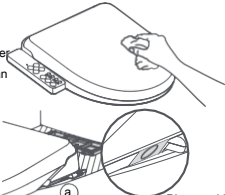

a. Disassembly button of toilet cover

Name and content of hazardous substances in the product

Name of parts	Hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated Diphenyl Ether (PBDE)
Outer shell	○	○	○	○	○	○
Circuit board	×	○	○	○	○	○
Attachment	○	○	○	○	○	○
*This form is compiled in accordance with the regulations of SJ/T 11364. ○ : It means that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T 26572. × : It means that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement of GB/T 26572.						

Basic parameter information

Product name	Smartmi Smart Toilet Cover	Product gross weight	about 5.2kg	Rated voltage	220V~
Product number	ZNMTG01ZM	Product net weight	about 3.8kg	Rated frequency	50Hz
Water-supply temperature	4℃~40℃	Temperature of using environment	4℃~40℃	Rated power	1340W
Product size	520mmx470mmx145mm	Range of inlet water pressure	0.08MPa~0.75MPa	Maximum power	1500W
Waterproof level	IPX4	Heating method of warm water	Instant heating mode		

* When the temperature of inlet water is 15℃, the temperature of outlet water is 39℃ (maximum gear), and the flow rate is 800ml/min (maximum gear).

Notes

Transport

- △ When moving the product, ensure to stop the main engine and pull out the power plug.
- △ In winter, transportation or long-term storage may freeze the water in the product, so please take anti-freezing measures.

Installation

- △ Please install this product correctly according to the manual, otherwise electric shock, fire, personal injury and other damages may occur.
- △ Please avoid installing it in a damp and easily immersed bathroom. Do not spray water on the product or wash it with water to prevent water from entering inside and causing damage.
- △ When removing the filter, be sure to close the water-supply angle valve. When installing the filter, please tighten it firmly.
- △ Please provide a separate power socket for this product, and do not share the power socket with other high-power electrical appliances.
- △ Before installation, please make sure if the power of this product matches the power socket and power cord wiring.
- △ The power socket used by this product must be grounded reliably, and it is strictly forbidden to lay the ground wire on the null line or on the water pipe.
- △ Use the new hose assembly that comes with the appliance, and the old hose assembly cannot be reused.

Power cord

- Use the power cord according to the following instructions to avoid electric shock, damage or fire:
- △ Before performing maintenance work, make sure that the plug is disconnected from the socket.
- △ Do not pinch, bend or twist the power cord excessively, otherwise the core may be exposed or broken.
- △ Do not pull the power cord when the plug is disconnected from the socket.
- △ Do not use sockets with insufficient rated power or other improper specifications.
- △ If the power cord is damaged, please contact and consult Smartmi customer service for repair.

When using

- △ If the product has abnormal noise, odor, high temperature, etc., please stop using it immediately.
- △ Do not lean on or tilt the product during operation.
- △ When using it, please keep your skin close to sensing area of the seat ring, otherwise the product will stop washing.
- △ Please pay attention to using municipal tap water that meets national standards, and do not use reclaimed water, etc.

Use

restrictions

Do not use products under the following conditions, otherwise electric shock, fire, personal injury and other damages may occur:

- ⊗ Under the thunder and lightning weather
- ⊗ There is direct sunlight or heating equipment nearby.
- ⊗ When the power cord is damaged or the power plug is loose.
- Do not perform the following operations, otherwise electric shock, fire, personal injury and other damages may occur:
- ⊗ For people (including children) who have physical perception and intellectual deficiencies or lack of experience and common sense, please use it in company with someone; otherwise, long-term use may cause low-temperature burns.
- ⊗ Children should not play with this product, otherwise it may cause personal injury.
- ⊗ The user cannot disassemble the machine privately. If you need help, please contact and consult Smartmi customer service.
- ⊗ Do not put lighted cigarettes and other burning objects beside the smart toilet cover.

- △ Statement: In the same room where this product is installed, a water-stop valve needs to be installed in a position at one's fingertips, which is used in cases of emergency to cut off the inlet pathway of this product without tools; otherwise, the accidental failure of this product may cause loss to the user.

Smartmi Smart Toilet Cover Manual

Please read this manual carefully before using the product and keep it properly.

smartmi